


K411 App Note 2: Three Material Feed Mixer

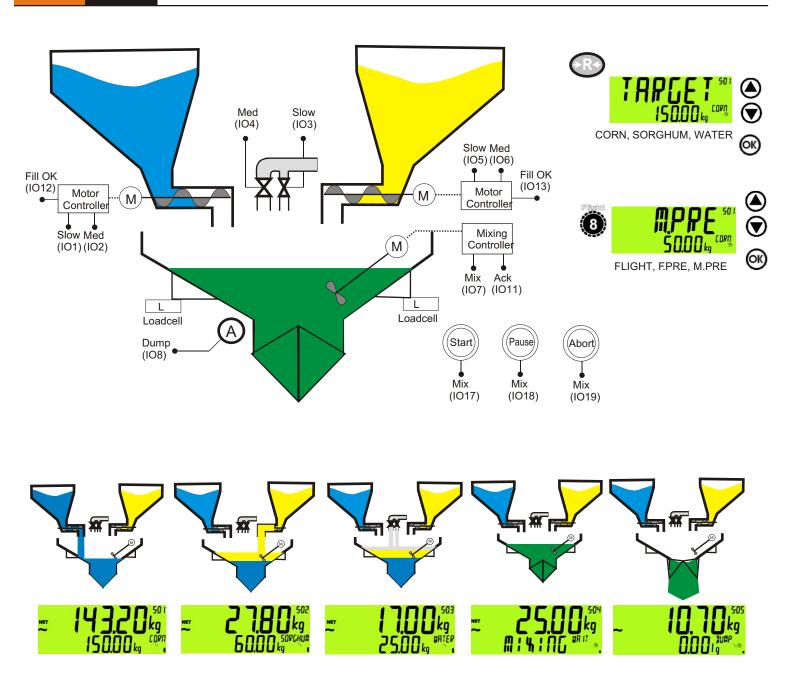

Notes:

Multi-speed Filling stage ensures fast accurate filling. Auto-inflight correction is used to ensure filling accuracy is maintained as header silos empy and fill rate slows.

Dump-to-weight is used to ensure all product leaves hopper before end of batch

Fill Interlocks from motor controller error signals are used to stop fill if header silo is empty.

Feedback from mixing controller is used to time the mix stage.



- SETUP	
- FUNC	
···· NUM	: 3
- SF1	
TYPE	: START
KEY	: IO17
- TYPE	: PAUSE
KEY	: I018
⊡- SF3	
- TYPE	: ABORT
KEY	: IO19

Note:

WAIT stage has LINK set to PREV so that mixing only occurs if WATER has been added during the batch.

SETUP			
- BATCH			
- MAT			
	NAME1 :		
	NAME2 :		
	NAMES :	WATER	
- STAGES			
NUM : _5_			
	STAGE.1		
	TYPE	: FILL	
	S.FILL	: IO1	
	M.FILL	: 102	
	F.FILL	: NONE	
	I.LOCK	: IO12	
	MAT	: MAT.1	
	ST.ACT	: TARE	
	CORR	: AUT.FLT	
STAGE.2			
1	···· (same as	STAGE.1)	
	STAGE.3		
	(same as	STAGE.1)	
	STAGE.4		
	TYPE		
	NAME		
	INPUT		
	STG.OUT		
	LINK	: PREV	
	STAGE. 5		
1 1	TYPE		
	DMP.OUT	: 108	
	 DMP.TYP	- METCUT	
	TOL.HI		
		. 0.3 kg	
