


rinstrum C500 QUICK START CARD

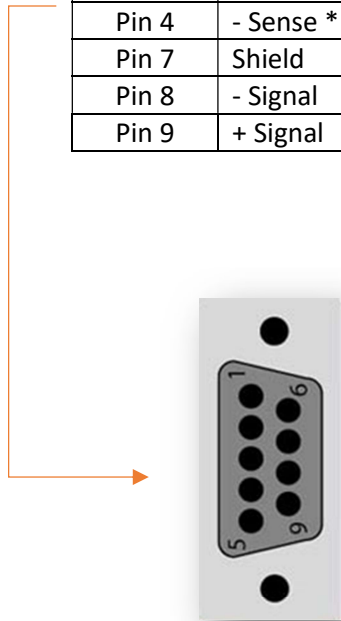




















DB9 LOAD CELL CONNECTION

Pin 1	+ Exc
Pin 2	+ Sense *
Pin 3	- Exc
Pin 4	- Sense *
Pin 7	Shield
Pin 8	- Signal
Pin 9	+ Signal



* Jumpers are required between [+ Sense +Exc] & [- Sense -Exc] if not 6 wire connection.

rinstrum C500 QUICK START CARD

	PRESS & HOLD SELECT KEY TO ENTER FULL SETUP	
	THEN PRESS SELECT 2 MORE TIMES TO DISPLAY FULL SETUP	
	PRESS F2 {OK} TO ENTER FULL SETUP	
	PRESS ZERO KEY 2 TIMES TO ENTER CAL	
	PRESS TARE KEY TO ENTER ZERO CAL	
	PRESS SELECT KEY TO ENTER THEN F2 TO CAPTURE ZERO	
	PRESS TARE KEY 2 TIMES FOR SPAN (ADD LOAD)	
	PRESS SELECT KEY TO ENTER SPAN THEN PRESS F2 KEY	
KEY IN VALUE	USE    	THEN PRESS F2 {OK}
	PRESS ZERO KEY REPEADELY TO END THEN PRESS TARE	